

# Default MAP Page

(MAP Page 1)

To access the **MAP SETUP** Page, PRESS and HOLD **CLR**

- 1 PRESS **MENU** to display the Page Menu.
- 2 With “**MAP SETUP**” highlighted, PRESS **ENT**
- 3 ROTATE small FMS knob view selections.
- 4 With “**MAP**” highlighted PRESS **ENT**. A window appears and allows you to turn the various selections ON or OFF by ROTATING the Large FMS Knob to highlight the item, then, ROTATE the small FMS knob in the direction of the highlighted arrow.

This page is also used to change  
TOPO DATA, TERRAIN DATA, OBSTACLE DATA,  
RESERVE time, and FUEL RANGE.

**AUTO ZOOM** – when ON automatically adjusts the map range as the aircraft approaches the active waypoint.

**TRACK VECTOR** – When ON, it draws a cyan colored dashed line with an arrowhead along the aircraft’s track. It predicts the aircraft position in 60 seconds.

**WIND VECTOR** – Displays the wind direction and velocity in the upper right corner, next to the map orientation.

**NAV RANGE RING** – Displays a compass rose around the airplane symbol. A box appears in the upper right sector to show radius of compass rose.

**FUEL RING (RSV)**- Draws two rings around the airplane. The smaller dotted represents the position when fuel remaining is down to the reserve setting. The larger solid line represents fuel exhaustion.

MAP Page 2 – TRAFFIC MAP

MAP Page 3 – STORMSCOPE Page

MAP Page 4 – WEATHER LINK Page

MAP Page 5 – TERRAIN PROXIMITY Page

Rev 12/24/2006